

CAL MODE PROGRAMMING FOR AP-SERIES

1. Make sure the scale is unplugged. Remove the sealing bolt located on the rear left side of the scale.
2. After removing the sealing bolt, you will see a red micro switch .Slide the micro switch to the left. (Towards the pole)
3. Plug the scale in. The weight display will flash “CAL” three times and then go blank.
4. Press the “4” key {the “C” key advances through the settings} and then the following key sequences:

15 lb	30 lb	60 lb	6 kg	15kg	30 kg
8 7 C	8 7 C	9 7 C	8 5 C	8 5 C	9 7 C
2 2 C	2 0 C	3 9 C	2 1 C	2 2 C	3 8 C
0 0 C	0 0 C	0 3 C	0 0 C	0 0 C	0 3 C
½ 3 C	9 2 C	9 2 C	2 3 C	2 3 C	5 3 C
0 7 C	0 7 C	1 7 C	0 7 C	0 7 C	1 7 C
4 7 C	4 7 C	4 7 C	0 7 C	0 7 C	4 7 C
		9 8 C			9 8 C

5. On the 60LB and the 30KG capacity scale only the display will show TARE 14995. If not key in 14995. Press the “ZERO” key then the “0” key. The display will show “Err 2”. Proceed with the calibration procedure.
6. On the 15LB and 30LB the display will read “END” and then go blank. Proceed with the calibration procedure.