




OPERATION MANUAL

Baseball Models

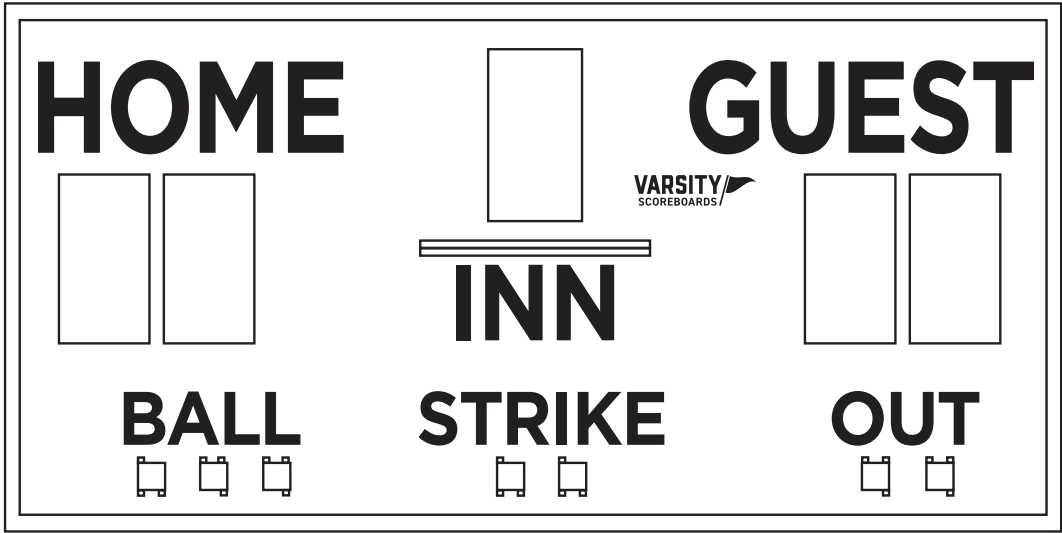

A NOTE ABOUT THIS MANUAL /

**This manual is comprehensive for all
Varsity Scoreboards baseball models.**

The **Network Wizard**, **Home Menu Operation**, and the **Options Menu**
will be used no matter what scoreboard you have purchased.

Your model may differ in the individual sport sections, which are not
available on all scoreboard models



FAQs

*Use your phone camera
to activate QR code.*


TABLE OF CONTENTS /

THE WIRELESS SCOREBOARD CONTROLLER	4-5
GETTING STARTED	6
NETWORK WIZARD	7-9
OPERATIONS MANUAL	10-18



THE WIRELESS SCOREBOARD CONTROLLER

THE FACE

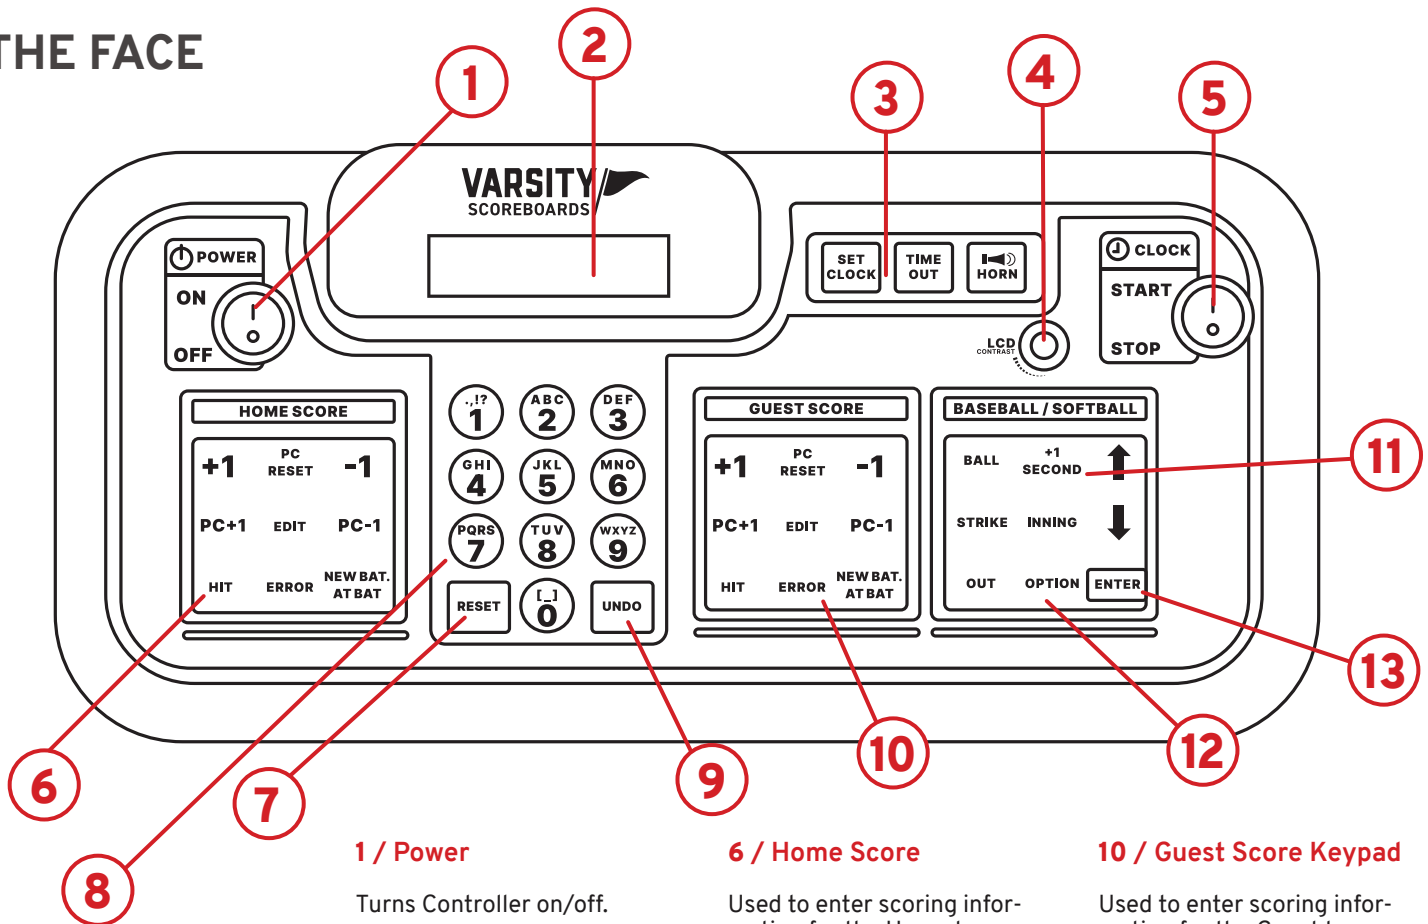

1 / Power

Turns Controller on/off.

2 / LCD Display

All settings and scoring information will be visible here.

3 / Clock Controls

These are used to set, start, and stop the game and time-out clock. The horn button is also located in this section.

4 / Contrast Knob

This knob is used to change the brightness of the LCD Display.

5 / Start & Stop Switch

This switch is used to start and stop the game clock.

6 / Home Score

Used to enter scoring information for the Home team

7 / Reset Key

Use this key to clear out existing game and reset the scoreboard to default start-up values. Press and hold for 3 seconds to clear all of the scoring info while saving option settings.

8 / Numeric Keypad

Used to enter values when setting options and editing scoring information.

9 / Undo Key

Used to undo the last Controller entry. Press/hold the undo key while turning the keyboard on to access the System Settings menu.

10 / Guest Score Keypad

Used to enter scoring information for the Guest team.

11 / Game Keypad

Used to enter values related to game play.


12 / Option Key

To enter the options menu, press and hold Option key for 3 seconds.

13 / Enter Key

Used to accept any entry in the Option menu and to continue last game scored when Controller is first turned On.

THE BACK

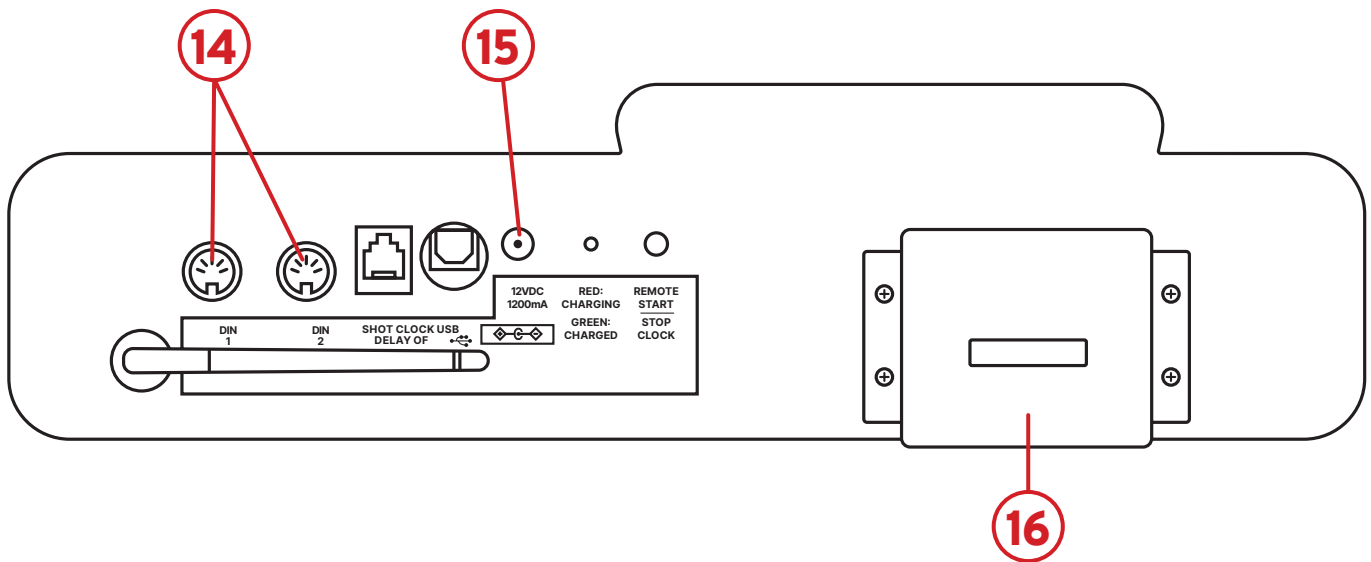

14 / DIN Socket

For DIN cables (only used for hard-wired setup).

15 / Power Jack

For AC Adapter. Plug into standard 120V power source.

16 / Card Holder

Holds additional game insert cards.

Charging the Controller


While the controller is in the 'Off' position, connect the AC adapter to the **power jack** on the back of the controller and into a standard **120V power source** for charging.



GETTING STARTED

Make sure the Game Inserts that came with your scoreboard are in the proper location on the Wireless Scoreboard Controller (*Controller, for short*).

The **Home Score** goes into the far left slot; the **Guest Score** goes into the slot immediately to the right of the number pad; and the **General Sport** insert goes into the far right slot.

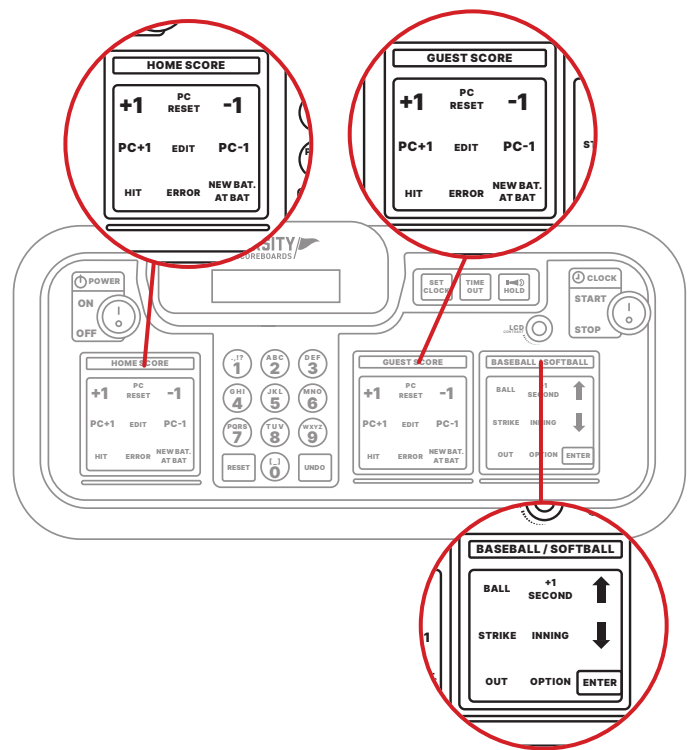


BASEBALL/SOFTBALL OPERATION

Explains keypad functions for scoreboard control.
Functions are model specific.


Home Score Keypad

Note: Our pitch count display, PCD3, is an option that can be purchased at any time.

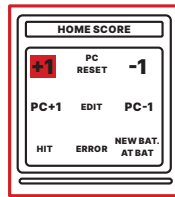


+1

Press this key to add one point to the Home Score

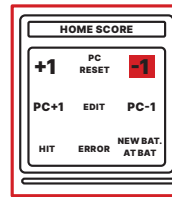


-1

Press this key to subtract one point from the Home Score

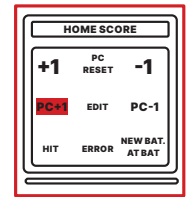


PC+1

Press this key to add one pitch count to the Home Score

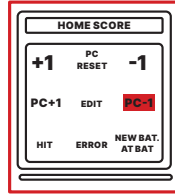


PC-1

Press this key to subtract one pitch count from the Home Score

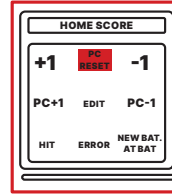


PC Reset

Press this key at any time to reset the Pitch Count to zero

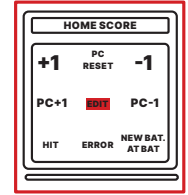


Edit

Press this key to edit one of the previous choices

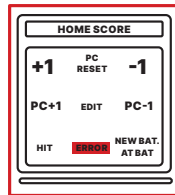


Error

Press this key to display an Error for the Home Team

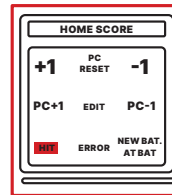

Hit

Press this key to display a Hit for the Home Team

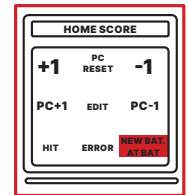

New Bat at Bat

Press this key to input a new player at bat


Guest Score Keypad

Note: Our pitch count display, PCD3, is an option that can be purchased at any time.




+1

Press this key to add one point to the Home Score

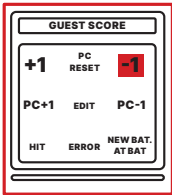


-1

Press this key to subtract one point from the Home Score

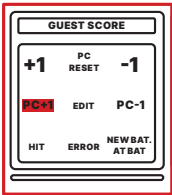


PC+1

Press this key to add one pitch count to the Home Score

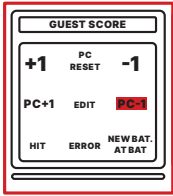


PC-1

Press this key to subtract one pitch count from the Home Score

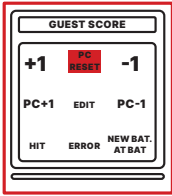

PC Reset

Press this key at any time to reset the Pitch Count to zero

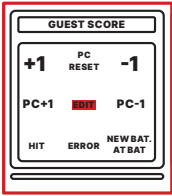


Edit

Press this key to edit one of the previous choices



Error

Press this key to display an Error for the Home Team

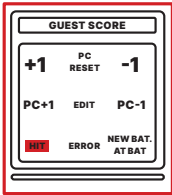

Hit


Press this key to display a Hit for the Home Team



New Bat at Bat


Press this key to input a new player at bat

Baseball/Softball Keypad

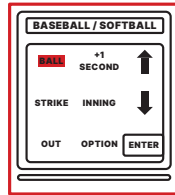


Ball

Press this key to add a Ball

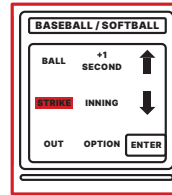


Strike

Press this key to add a Strike

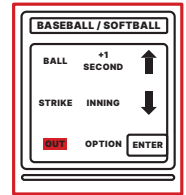


Out

Press this key to add an Out

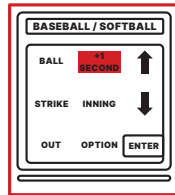


+1 Second

Press this key to add one second to the clock

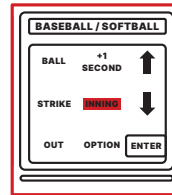


Inning

Press this key to advance the Inning

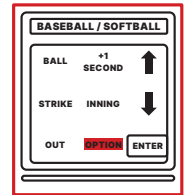


Option

Press and hold this key to access the Options menu (Page 12)

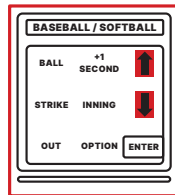

Up & Down Arrows

Press these keys to scroll between items while in the Options menu

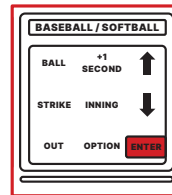


Enter

Press this key to accept selected options

Number Keypad


Numbers / Used when editing input, etc.

Reset / Press and hold to go back to Home Menu

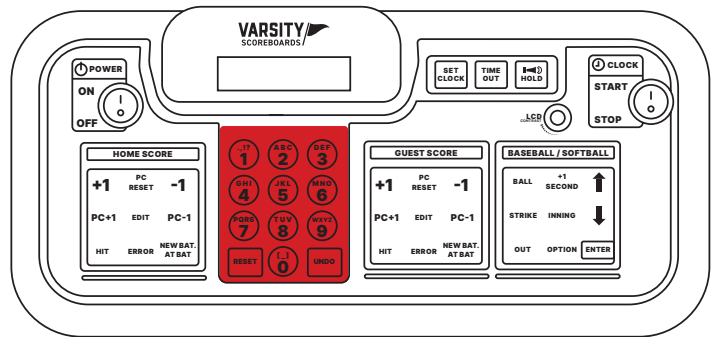


Power Switch

This switch is used to power **On** and **Off** the LCD keyboard Controller

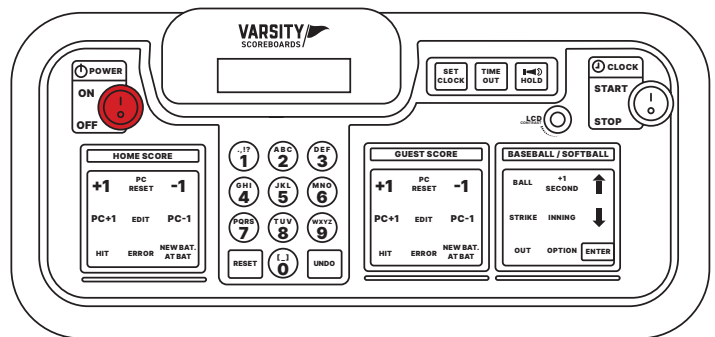

Clock Switch

This switch is used to **Start** and **Stop** the game clock

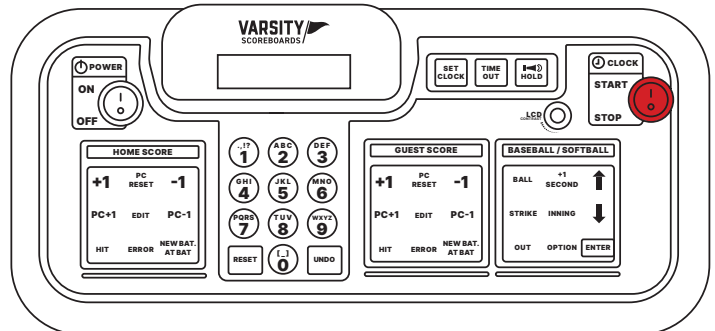

Set Clock

Pressing the **Set Clock** key on the keypad will take you to the **Set Clock Menu**. This menu will enable you to manipulate the scoreboard's clock. Use the **Up** and **Down** keys to scroll through several different options, listed below (for scoreboards with clock digits only):

Use Time 1 / Press the **Enter** key on this option to use the Time 1 preset

Use Time 2 / Press the **Enter** key on this option to use the Time 2 preset


Enter Game Time / Press the **Enter** key on this option to insert a one-time only clock setting. Use the number pad to input the time and then press the **Enter** key to accept.

Edit Game Time 1 / Press the **Enter** key on this option to edit the Time 1 preset. Use the number pad to input the time and then press the **Enter** key to accept.

Edit Game Time 2 / Press the **Enter** key on this option to edit the Time 2 preset. Use the number pad to input the time and then press the **Enter** key to accept.


Show Time Of Day / Press the **Enter** key on this option to have your scoreboard display the time of day

To go back to the regular game mode, without making a selection, press the **Reset** key.

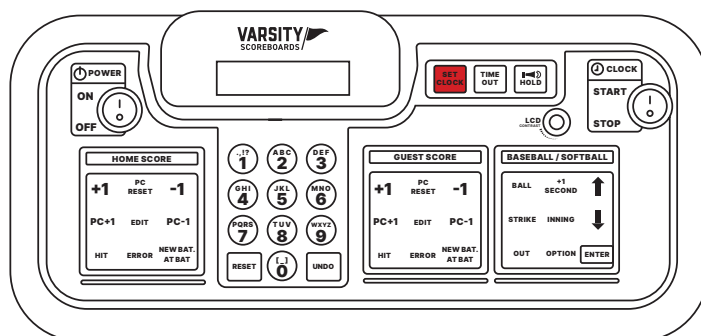

Timeout


Not used in baseball mode.

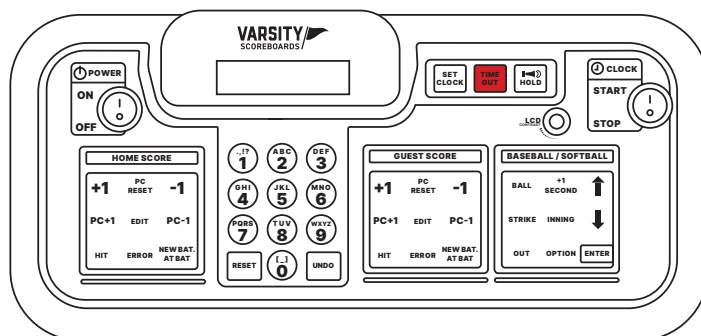

Horn Hold

Pressing the **Horn Key** will make your (optional) scoreboard horn sound

Note: Our outdoor scoreboard horn is an option that can be purchased at any time

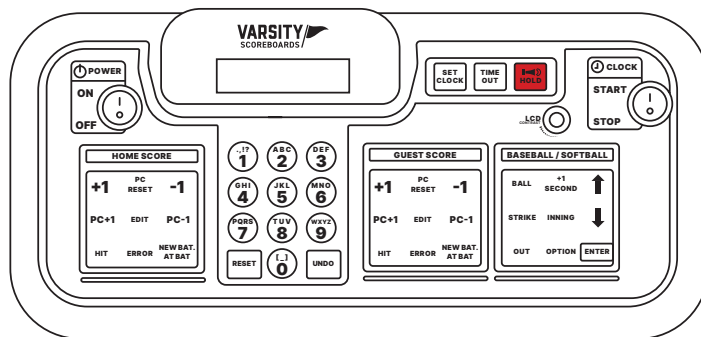


SYSTEM SETTINGS

Reset for Another Game

To reset the scoreboard to prepare for another game, press and hold **Reset** for three seconds.

All scoring information on both the Controller's LCD and the scoreboard will be cleared, while all option settings will be saved.

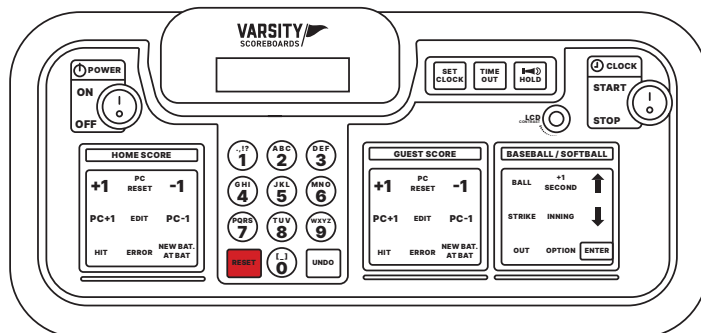


Shut Down

After the last game, turn the Controller's **Power** switch **Off**. All scoring information and option settings will be saved and may be retrieved when the Controller is turned back on by pressing **Enter**.

Shortly after the Controller is turned off, the **Period/Inning** digit on the scoreboard will begin to flash and will continue to do so until power to the scoreboard has been shut off at the scoreboard's power disconnect switch or circuit breaker.

Store the Controller and all accessories in a secure, dry location after each use.

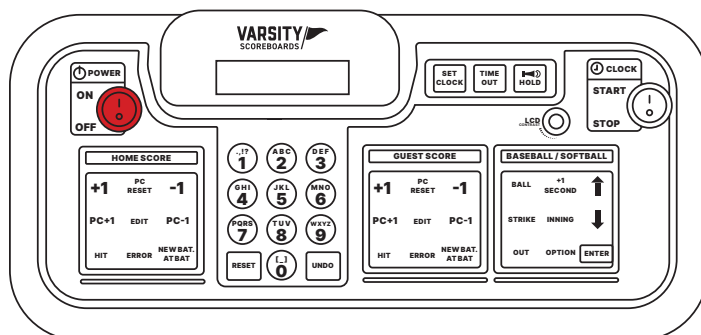

Battery Maintenance

To maintain the life of the Controller in between games or seasons, store it in a place where you can keep the adapter plugged in year-round to help regulate the battery voltage.

Important Power Note

After **each use** power to the scoreboard **must** be turned off at the scoreboard's **power disconnect switch** or **circuit breaker**.

Failure to do so will result in **unnecessary power consumption** and **shorten the life of the displays** and other electronic components.

That's it!

Now go play some ball.

