
# **Ball Transfer Units**

R310EN 2910 (2006.11)

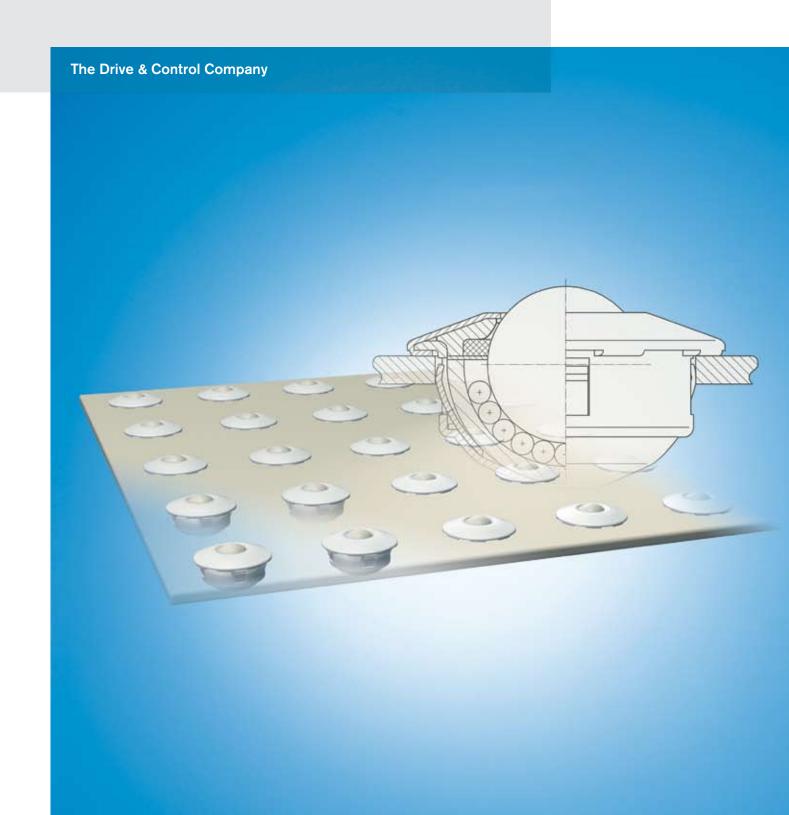

Bosch Rexroth AG Info Fax: +49 931 27862-22

# Linear Motion and Assembly Technologies

Ball Rail Systems
Roller Rail Systems
Linear Bushings and Shafts
Ball Screw Drives
Linear Motion Systems
Basic Mechanical Elements
Manual Production Systems
Transfer Systems



www.boschrexroth.com/brl

# **Ball Transfer Units**

Product Overview	4
Technical Data	6
Dimensions, Load Capacities	10
with Sheet Steel Housing R0530	10
with Plastic Load Ball R0531	10
Spring-Loaded R0532	11
with Solid Steel Housing R0533	12
without Housing R0534	15
with Reinforced Sheet Steel Housing R0535	15
with Spring Clip R0536	16
with Plastic Housing R0530	17
Tolerance Ring / Mounting Tools	18
Tolerance Ring R0810	18
Mounting tool R0536 for Ball Transfer Units R0535 and R0536	18

# **Product Overview**

Ball Transfer Units make light work of shifting, rotating and directing unit loads. They have proven extremely valuable as integral parts of conveyor systems, feed devices, and machining and packaging equipment.

### **Applications**

- General-purpose machines
- Feed tables for sheet-metal working machines
- Fixtures for press brakes
- Feed devices for machining centers
- Drilling machine tables and motor-driven supporting tables
- Assembly aids in the manufacture of large engines and motors

#### **Conveyor Systems**


- Ball transfer tables, turntables and switches for sorting and distribution systems
- Crossover sections of continuous conveyors
- Baggage sorting systems at airports
- Transport of steel tubes and pipes
- Lifting platforms

#### Other Fields


- Construction of special-purpose machines
- Aerospace industry
- Beverage and stone-processing industries

## **Further highlights**

- Types for all standard applications and for many special solutions
- Easy mounting and extraction
- Conveying speed up to 2 m/sec in all types
- Consistently high quality
- High rationalization effect
- Smooth running
- Precise rolling and full load-bearing capability in any mounting orientation, even top-down

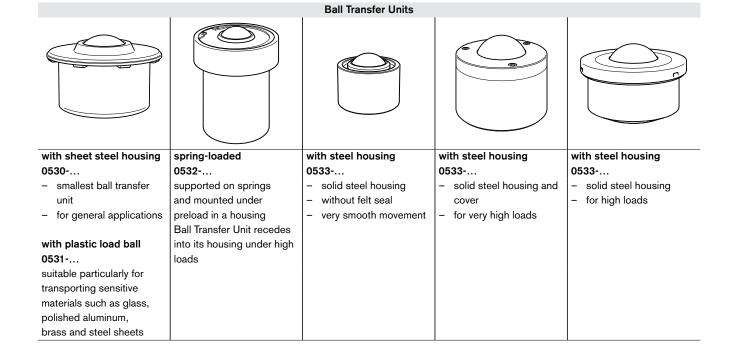



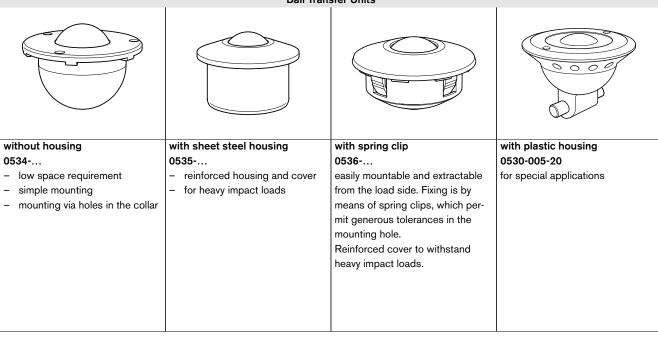


# **Technical Data**

# Structural design of the Ball Transfer Units

A hardened ball cup serves as a raceway for a multitude of small supporting balls. The supporting balls roll against the ball cup when the load ball turns. Rexroth Ball Transfer Units are designed so that precise rolling and full load-bearing capability are ensured in any mounting orientation.

Ball Transfer Units require little maintenance, and almost every type is protected against dirt by an oil-soaked felt seal.

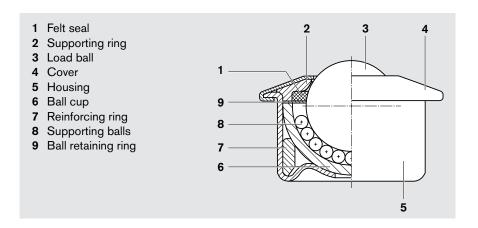

### Ball Transfer Units in corrosionpreventive design

Corrosion, caused by moisture or chemical attack, can lead to impaired functioning or even failure of the Ball Transfer Units. Coated (galvanized + chromated) surfaces similar to EN 12329 specifications and/or higher-grade materials offer enhanced anticorrosion protection.

#### Galvanized covers and housings

offer simple protection against corrosion. In this type, the supporting balls and load balls are made from standard antifriction bearing steel and are protected from corrosive attack by the lubricant.

#### Galvanized internals, corrosionresistant steel balls

Consistent coating of all internals and the use of corrosion-resistant steels for the antifriction bearing elements, similar to ISO 683-17 specifications, ensures comprehensive corrosion protection such as specified in ASTM B117-03.


# All parts made from rust and acid resistant steel


(Antifriction bearing steel to EN 10088)


This type is selected if the conveyed articles are abrasive and/or there is exposure to an aggressive environment, especially to chemicals.

Since all versions have been designed to meet the high standards of ISO 281, even this type is unsuitable for underwater use.

# Mounting possibilities

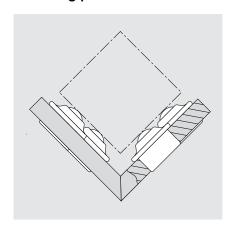

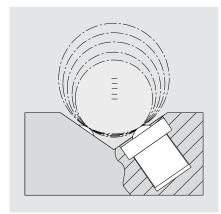

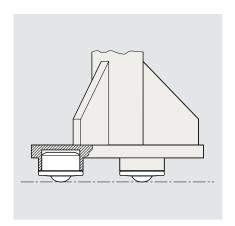

Application example Ball Transfer Units used for assembling ball rail system runner blocks






# **Technical Data**

# Arrangement of the Ball Transfer Units

How the Ball Transfer Units should be arranged depends on the undersurface of the conveyed article. For articles with a uniform, smooth undersurface, such as boxes and cases, the distance between the Ball Transfer Units is calculated simply by dividing the smallest edge length by 2.5.

#### Example:


Undersurface of the conveyed article =  $500 \times 1000 \text{ mm}$ Distance between Ball Transfer Units a =  $\frac{500 \text{ mm}}{2.5}$  = 200 mm



# Determining the load for Ball Transfer Units

To determine the load for a Ball Transfer Unit, the weight of the conveyed article is divided by 3. If the load ball height tolerances are well-correlated, it is possible, depending on the nature of the conveyed article, to also perform the calculation based on the number of load-bearing Ball Transfer Units.

## Example: Mass = 3000 N Ball Transfer Unit load $F = \frac{3000 \text{ N}}{2} = 1000 \text{ N}$



# Spring-loaded Ball Transfer Units

The figures in the column headed "Preload" are most important when choosing the size for these types. The weight of the conveyed article is divided in this case by the number of load-bearing Ball Transfer Units.

### Conveying speed

$$V_{max} = 2 \text{ m/s}$$

### Load capacity

The stated load capacities apply to all mounting orientations and relate to 10<sup>6</sup> rotations of the load ball. In case of prolonged periods of use at speeds above 1 m/sec, an increase in temperature and reduced nominal life must be expected as a function of the load, especially for sizes 60 to 120.

(N)

### Calculation of the nominal life

$$L = \left(\frac{C}{F}\right)^3$$

$$L = \text{nominal life}$$

$$C = \text{Load capace}$$


$$E = \text{load}$$

L = nominal life (rotations) C = Load capacity (N)

\_\_\_\_\_\_ F = load

## **Friction coefficients**

The diagram shows the friction coefficients of Ball Transfer Units as a function of load and speed. These guideline values apply to any mounting orientation for rolling contact on a hardened steel plate.

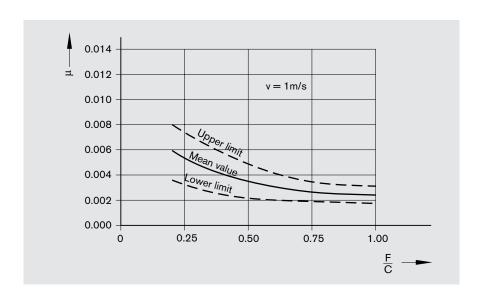

### Operating temperature

Ball Transfer Unit with steel load ball:

up to 100 °C.

At temperatures above 100 °C, only non-galvanized load balls without a felt seal should be used. Make allowance for reduction in load capacity. Use high-temperature lubricant! Follow the manufacturer's instructions! The existing lube oil may have to be washed out.

Ball Transfer Unit with plastic load ball:

up to 30 °C.

At temperatures above 30 °C, make allowance for reduction in load capacity.

# Temperature factor

for steel load ball:

for plastic load ball:

Temperature (°C)	Temperature factor f <sub>T</sub>	Temperature (°C)	Temperature factor f <sub>T</sub>
125	0.9	40	0.9
150	0.8	50	0.8
175	0.7	60	0.7
200	0.5	80	0.5


The load capacity must be multiplied by the temperature factor.


### Lubrication

The lubrication must be adapted to the conveyed articles and to the ambient conditions. The lubricant (oil) can be introduced via the load ball.

# Ball Transfer Units with sheet steel housing R0530

- for general applications

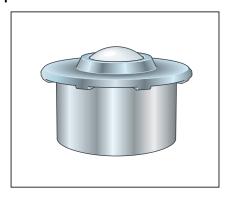

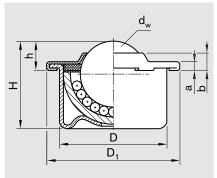

Part number	Execution	Dimen	sions (mm)		Load capa- city (N)	Weight (kg)				
		d <sub>w</sub>	D	D <sub>1</sub>	h	Н	а	b	С	
R0530 108 10 <sup>1)</sup>	Cover and housing	8	12.6 ± 0.055	17	$4.8 \pm 0.15$	11.2	1.8	3.2	130	0.007
R0530 112 10 <sup>1)</sup>	galvanized	12	18.0 ± 0.055	23	7.4 ± 0.15	15.5	2.0	4.3	250	0.018
R0530 115 10 <sup>1)2)</sup>		15	24.0 ± 0.065	31	9.5 ± 0.20	21.5	2.5	6.1	500	0.038
R0530 122 10 <sup>2)</sup>		22	36.0 ± 0.080	45	9.8 ± 0.20	29.5	2.9	5.7	1300	0.132
R0530 130 10 <sup>2)</sup>		30	45.0 ± 0.080	55	13.8 ± 0.30	37.5	3.7	7.9	2500	0.265
R0530 145 10 <sup>2)</sup>		45	62.0 ± 0.095	75	19.0 ± 0.40	53.7	4.2	10.3	6000	0.720
R0530 208 10 <sup>1)</sup>	All parts galvanized,	8	12.6 ± 0.055	17	4.8 ± 0.15	11.2	1.8	3.2	100	0.007
R0530 212 10 <sup>1)</sup>	balls made from	12	18.0 ± 0.055	23	7.4 ± 0.15	15.5	2.0	4.3	180	0.018
R0530 215 10 <sup>1)2)</sup>	corrosion-resistant steel	15	24.0 ± 0.065	31	9.5 ± 0.20	21.5	2.5	6.1	370	0.038
R0530 222 10 <sup>2)</sup>		22	36.0 ± 0.080	45	9.8 ± 0.20	29.5	2.9	5.7	970	0.132
R0530 230 10 <sup>2)</sup>		30	45.0 ± 0.080	55	13.8 ± 0.30	37.5	3.7	7.9	1900	0.265
R0530 245 10 <sup>2)</sup>		45	62.0 ± 0.095	75	19.0 ± 0.40	53.7	4.2	10.3	4500	0.720
R0530 608 00 <sup>1)</sup>	All parts made from	8	12.6 ± 0.055	17	4.8 ± 0.15	11.2	1.8	3.2	100	0.007
R0530 612 00 <sup>1)</sup>	corrosion-resistant steel	12	18.0 ± 0.055	23	7.4 ± 0.15	15.5	2.0	4.3	180	0.018
R0530 615 00 <sup>1)2)</sup>		15	24.0 ± 0.065	31	9.5 ± 0.20	21.5	2.5	6.1	370	0.038
R0530 622 00 <sup>2)</sup>	1	22	36.0 ± 0.080	45	9.8 ± 0.20	29.5	2.9	5.7	970	0.132
R0530 630 00 <sup>2)</sup>		30	45.0 ± 0.080	55	13.8 ± 0.30	37.5	3.7	7.9	1900	0.265

### Ball Transfer Units with plastic load ball R0531


- suitable for conveying sensitive articles


Part number	Execution	Dimen	sions (mm)		Load capa- city <sup>4)</sup> (N)	Weight (kg)				
		d <sub>w</sub>	D	D <sub>1</sub>	h	н	а	b	С	
R0531 108 10 <sup>1)</sup>	Cover and housing	8	12.6 ± 0.055	17	4.8 ± 0.15	11.2	1.8	3.2	10	0.005
R0531 112 10 <sup>1)</sup>	galvanized	12	18.0 ± 0.055	23	7.4 ± 0.15	15.5	2.0	4.3	35	0.012
R0531 115 10 <sup>1)2)</sup>		15	24.0 ± 0.065	31	9.5 ±0.20	21.5	2.5	6.1	70	0.024
R0531 122 10 <sup>2)3)</sup>		22	36.0 ± 0.080	45	9.6 ±0.20	29.3	2.9	5.7	100	0.093
R0531 130 10 <sup>2)3)</sup>		30	45.0 ± 0.080	55	13.6 ±0.30	37.3	3.7	7.9	150	0.168
R0531 208 10 <sup>1)</sup>	All parts galvanized,	8	12.6 ± 0.055	17	4.8 ± 0.15	11.2	1.8	3.2	10	0.005
R0531 212 10 <sup>1)</sup>	load balls made from	12	18.0 ± 0.055	23	7.4 ± 0.15	15.5	2.0	4.3	35	0.012
R0531 215 10 <sup>1)2)</sup>	corrosion-resistant steel	15	24.0 ± 0.065	31	9.5 ±0.20	21.5	2.5	6.1	70	0.024
R0531 222 10 <sup>2)3)</sup>		22	36.0 ± 0.080	45	9.6 ±0.20	29.3	2.9	5.7	100	0.093
R0531 230 10 <sup>2)3)</sup>		30	45.0 ± 0.080	55	13.6 ±0.30	37.3	3.7	7.9	150	0.168
R0531 608 00 <sup>1)</sup>	All parts made from	8	12.6 ± 0.055	17	4.8 ± 0.15	11.2	1.8	3.2	10	0.005
R0531 612 00 <sup>1)</sup>	corrosion-resistant steel	12	18.0 ± 0.055	23	7.4 ± 0.15	15.5	2.0	4.3	35	0.012
R0531 615 00 <sup>1)2)</sup>		15	24.0 ± 0.065	31	9.5 ±0.20	21.5	2.5	6.1	70	0.024
R0531 622 00 <sup>2)3)</sup>		22	36.0 ± 0.080	45	9.6 ±0.20	29.3	2.9	5.7	100	0.093
R0531 630 00 <sup>2)3)</sup>		30	45.0 ± 0.080	55	13.6 ±0.30	37.3	3.7	7.9	150	0.168

- 1) Without felt seal
- 2) Bottom hole for dirt discharge against surcharge
- 3) Dry felt seal
- 4) At 20 °C

# Ball Transfer Units spring-loaded R0532

- supported on springs and mounted under preload in a housing
- Ball Transfer Unit recedes into its housing under high loads

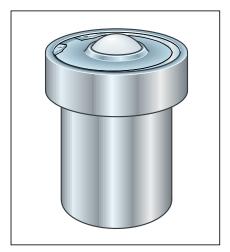

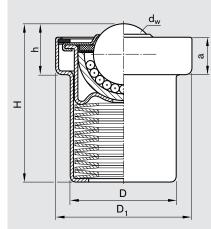


Part number	Execution	Dim	ension	ns (mm)				Preload (N)	Ultimate load <sup>1)</sup> (N)	Tol. for preload and ultimate load (%)	Weight (kg)
		d <sub>w</sub>	D	$D_1$	h	Н	а				
R0532 122 10	Cover and housing	22	38.8	50 ± 0.100	18.6	58.1	13.6	730	860	+25/-7.5	0.30
R0532 130 10	galvanized	30	48.2	62 ± 0.125	24.4	70.0	17.0	1350	1600	+15/-7.5	0.60
R0532 145 10		45	66.4	85 ± 0.150	35.6	100.5	24.2	2280	2770	+15/-7.5	1.60
R0532 222 10	All parts galvanized,	22	38.8	50 ± 0.100	18.6	58.1	13.6	730	860	+25/-7.5	0.30
R0532 230 10	balls made from	30	48.2	62 ± 0.125	24.4	70.0	17.0	1350	1600	+15/-7.5	0.60
R0532 245 10	corrosion-resistant	45	66.4	85 ± 0.150	35.6	100.5	24.2	2280	2770	+15/-7.5	1.60
	steel										
R0532 123 10 <sup>2)</sup>	Galvanized	22	38.8	50 ± 0.100	18.6	58.1	13.6	170	250	+15/-7.5	0.28


<sup>1)</sup> Under ultimate load the Ball Transfer Unit recedes completely.

<sup>2)</sup> With helical spring

### Ball Transfer Unit with solid steel housing - without collar R0533

- without felt seal
- very smooth movement

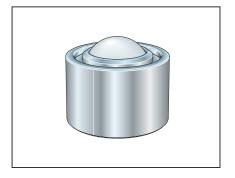


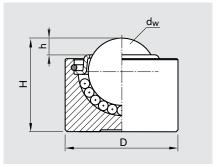


Part number	Execution	Dimensi	ons (mm)		Load capacity (N)	Weight (kg)	
		d <sub>w</sub>	D	h	Н	С	
R0533 712 00	Bright metal	12	$20 \pm 0.065$	~3	$16.5 \pm 0.2$	250	0.028

### Ball Transfer Unit with solid steel housing - with high collar R0533

- without felt seal
- very smooth movement
- recedes partially into housing

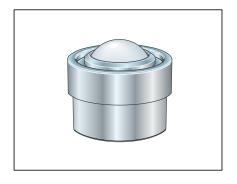


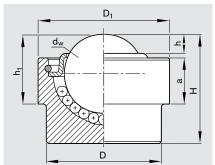


Part number	Execution	Dimer	sions (mm)	)					Load capacity (N)	Weight (kg)
		d <sub>w</sub>	D	$D_1$	h	h <sub>1</sub>	H	а	С	
R0533 702 00	Bright metal	12	17.5 ± 0.1	$20 \pm 0.1$	~3	$10.5 \pm 0.1$	16.5 ± 0.2	7± 0.1	250	0.027

### Ball Transfer Unit with solid steel housing - with low collar R0533

- without felt seal
- very smooth movement
- recedes totally into housing

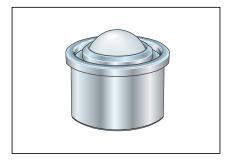


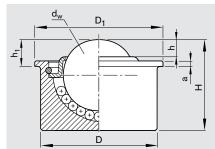


Part number	Execution	Dimens	ions (mm)			Load capacity (N)	Weight (kg)			
		d <sub>w</sub>	D	$D_1$	h	h <sub>1</sub>	Н	а	С	
R0533 012 00	Bright metal	12	$20 \pm 0.065$	22 -0.5	~3	$4.5 \pm 0.1$	15	1	250	0.024

### Ball Transfer Units with solid steel housing - with felt seal R0533

- for high loads

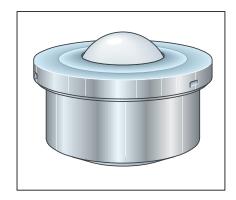

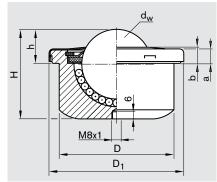



Part number	Execution <sup>1)</sup>	Dimer	nsions (mm)				Load capacity (N)	Weight (kg)		
		d <sub>w</sub>	D	D <sub>1</sub>	h	Н	а	b	С	
R0533 060 00	Bright metal	60	100 ± 0.11	117	$29.5 \pm 0.2$	77.5	13	14.5	13000	3.5
R0533 160 10	Cover and housing galvanized	60	100 ± 0.11	117	29.5 ± 0.2	77.5	13	14.5	13000	3.5
R0533 260 10	All parts galvanized, balls made	60	100 ± 0.11	117	29.5 ± 0.2	77.5	13	14.5	9700	3.5
	from corrosion-resistant steel									

<sup>1)</sup> Upon request, available with lube hole (0533-x61-x0)

### Ball Transfer Units with solid steel housing - with polymer wiper seal for heavy soiling R0533

- for high loads

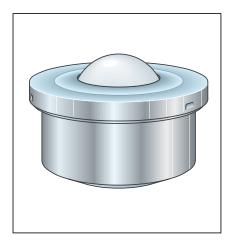

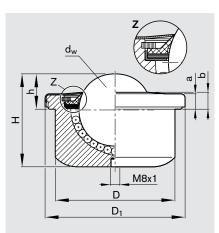


Part number	Execution	Dime	nsions (mm)				Load capacity (N)	Weight (kg)		
		d <sub>w</sub>	D	D <sub>1</sub>	h	Н	а	b	С	
R0533 105 10	Cover and housing galvanized	60	100 ± 0.011	117	29.5± 0.2	77.5	13	14.5	13000	3.5
R0533 205 10	All parts galvanized, balls made	60	100 ± 0.110	117	29.5± 0.2	77.5	13	14.5	9700	3.5
	from corrosion-resistant steel									

Ball Transfer Units with solid steel housing - without collar R0533

(with felt seal)

- for high loads



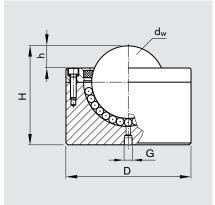



Part number	Execution	Dimension	ons (mm)				Load capacity (N)	Weight (kg)
		d <sub>w</sub>	D	G	h	Н	С	
R0533 076 00 <sup>1)</sup>	Bright metal	76	130 ±0.08	M8x1	23	103 ± 0.2	20000	8.6
R0533 090 00 <sup>2)</sup>		90	145 ±0.08	Rp 1/8	25	115 ± 0.2	25000	11.0


- 1) Upon request, available with lube hole
- 2) Lube hole Rp1/8" (at center of base) closed by screw plug

### Ball Transfer Units with solid steel housing - without collar R0533

- for high loads
- polymer wiper seal for heavy soiling
- relubrication bores
- mounting holes

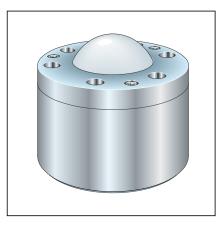

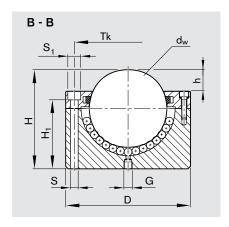


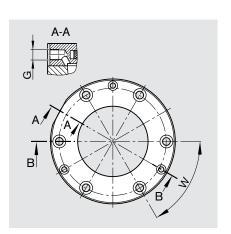


Part number	Execution	Dime	ensions (mm	)								Load capacity (N)	Weight (kg)
		d <sub>w</sub>	D	h	н	H₁	S	S <sub>1</sub>	$T_k$	G	W	С	
R0533 011 00	Bright metal	90	145 ±0.08	25	115 ±0.2	80.0	9	15	125	Rp 1/8	6 x 60°	25000	11.0
R0533 120 00		120	190 ±0.1	35	150 ±0.2	101.5	11	18	165	M8x1	3 x 120°	40000	24.6

# Ball Transfer Units without housing R0534

- low space requirement
- simple mounting
- mounting via holes in the collar

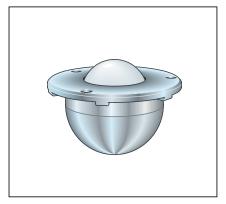


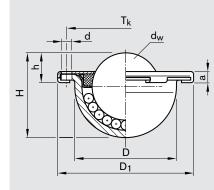


Part number	Execution	Dim	Dimensions (mm)								Load capa-	Weight
			Mounting holes						les	city (N)	(kg)	
		d <sub>w</sub>	D	D <sub>1</sub>	h	Н	а	d	T <sub>k</sub>	Number	С	
R0534 122 10	Cover and ball cup galvanized	22	33 -0.2	45	9.8±0.2	27.7	3.6	3.5	39	3	1200	0.1
R0534 222 10	All parts galvanized, balls made	22	33-0.2	45	9.8±0.2	27.7	3.6	3.5	39	3	900	0.1
	from corrosion-resistant steel											

### Ball Transfer Units with reinforced sheet steel housing R0535

- for heavy impact loads
- The special shape of the cover requires the use of a mounting tool, particularly if firmly lodged – see Mounting Tools.
- heavy duty version R0535 X47 10
- bottom hole for dirt discharge against surcharge

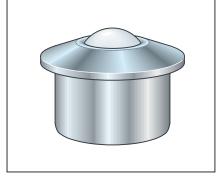

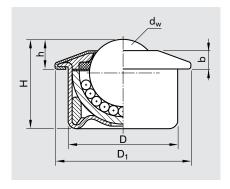


Part number	Execution	Dime	nsions (mm)		Load capacity (N)	Weight (kg)			
		d <sub>w</sub>	D	$D_1$	h	Н	b	С	
R0535 115 10	Cover and housing galvanized	15	24 ± 0.065	31	9.5 ±0.2	21.5	5.5	500	0.045
R0535 122 10		22	36 ± 0.080	45	9.8 ±0.2	29.5	6.0	1300	0.150
R0535 130 10		30	45 ± 0.080	55	13.8 ±0.3	37.5	8.0	2500	0.300
R0535 145 10	1	45	62 ± 0.095	75	19.0 ±0.4	53.7	10.0	6000	0.820
R0535 147 10		45	62 ± 0.095	75	19.0 ±0.4	53.7	10.0	8000	0.820
R0535 215 10	All parts galvanized, balls made from	15	24 ± 0.065	31	9.5 ±0.2	21.5	5.5	370	0.045
R0535 222 10	corrosion-resistant steel	22	36 ± 0.080	45	9.8 ±0.2	29.5	6.0	970	0.150
R0535 230 10	7	30	45 ± 0.080	55	13.8 ±0.3	37.5	8.0	1900	0.300
R0535 245 10	_	45	62 ± 0.095	75	19.0 ±0.4	53.7	10.0	4500	0.820
R0535 247 10	1	45	62 ± 0.095	75	19.0 ±0.4	53.7	10.0	6000	0.820
R0535 331 10	Ball cup, balls and ball retaining	30	45 ± 0.080	55	13.8 ±0.3	37.5	8.0	1900	0.300
	ring made from corrosion-resistant								
	steel. Other parts galvanized.								

### Ball Transfer Units with spring clip R0536

- easily mountable and extractable from the load side. Fixing is by means of spring clips, which permit generous tolerances in the mounting hole.
- reinforced cover to withstand heavy impact loads
- types with plastic load ball
- Special shape of cover requires use of mounting tool – see Mounting Tools.
- with holes in base for dirt discharge against surcharge



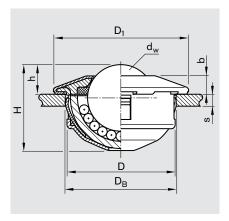

Part number	Execution	Dimensions (mm)								Load	Weight (kg)
							Mou	Mounting		capacity (N)	
							cuto	ut dia.			
		d <sub>w</sub>	D	D <sub>1</sub>	h	Н	b	D <sub>B</sub>	min	С	
R0536 115 10	Cover and housing galvanized	15	24-0.13	31	9.5 ±0.2	20.0	5.5	24+ 0.5	1.5	500	0.044
R0536 122 10		22	36-0.16	45	9.8 ±0.2	28.6	6.0	36+ 0.8	2.0	1300	0.146
R0536 130 10		30	45-0.16	55	13.8 ±0.3	37.5	8.0	45+ 1.0	2.5	2500	0.290
R0536 215 10	All parts galvanized, balls made from	15	24-0.13	31	9.5 ±0.2	20.0	5.5	24+ 0.5	1.5	370	0.044
R0536 222 10	corrosion-resistant steel	22	36-0.16	45	9.8 ±0.2	28.6	6.0	36+ 0.8	2.0	970	0.146
R0536 230 10		30	45-0.16	55	13.8 ±0.3	37.5	8.0	45+ 1.0	2.5	1900	0.290
R0536 331 10	Ball cup, balls and ball retaining ring	30	45-0.16	55	13.8 ±0.3	37.5	8.0	45+ 1.0	2.5	1900	0.290
	made from corrosion-resistant steel.										
	Other parts galvanized.										
R0536 415 10 <sup>2)</sup>	Cover and housing galvanized, with	15	24-0.13	31	9.5 ±0.2	20.0	5.5	24+ 0.5	1.5	70	0.044
R0536 422 10 <sup>2)</sup>	plastic load ball	22	36-0.16	45	9.6 ±0.2	28.4	6.0	36+ 0.8	2.0	100	0.146
R0536 430 10 <sup>2)</sup>		30	45-0.16	55	13.6 ±0.3	37.3	8.0	45+ 1.0	2.5	150	0.290


<sup>1)</sup> Minimum nominal thickness of mounting base

<sup>2)</sup> Dry felt seal

# Ball Transfer Units with plastic housing R0530

- for lightweight ball transfer tables




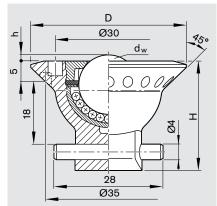


Part number	Execution	Dimension	s (mm)		Load capacity (N)	Weight (kg)	
		d <sub>w</sub>	D	h	Н	С	
R0530 005 20	Mounting with quarter-turn fastener	15	42	2	32	500	0.045

# Tolerance Ring / Mounting Tools


# Tolerance Ring R0810

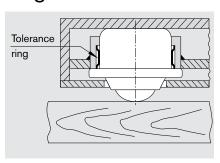

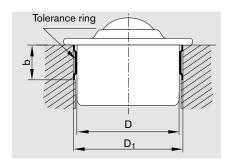

Part number					Tolerance ring Part num-	Mounting dimension (mm)	
				(mm)	ber	D <sub>1</sub>	b
R0530 .08	R0531 .08		-	12.6	0810-012-52	13.87 <sup>+0.15</sup>	6.1+0.2
R0530 .12	R0531 .12		-	18	0810-018-01	19.70+0.20	6.1+0.2
_	-	R0533 .712 00		20	0810-019-51	21.70+0.20	6.1+0.2
R0530 .15	R0531 .15	-	R0535 .15	24	0810-024-03	25.7 <sup>+ 0.20</sup>	7.1 +0.2
R0530 .22	R0531 .22	-	R0535 .22	36	0810-036-05	37.7+ 0.20	12.1+0.2
R0530 .30	R0531 .30	_	R0535 .30	45	0810-045-01	46.7+ 0.20	12.1+0.2
R0530 .45	-	_	R0535 .4	62	0810-062-03	64.1 <sup>+ 0.30</sup>	15.1 <sup>+0.2</sup>
_	_	R0533 .60	_	100	0810-100-02	102.5+ 0.35	19.1+0.3

Cutout dimensions for Ball Transfer Units R0530, R0531 and R0535 (fixed seating)

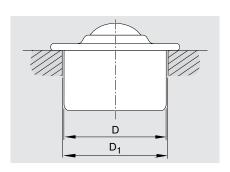


Size	D	Dimensions of cutout D1 (mm 2 mm sheet steel 5 mm aluminum	) for 16 mm wood
8	12.6 ±0,055	12.57+0,03	12.50 <sup>+0,05</sup>
12	18.0 ±0,055	17.97+0,03	17.90+0,05
15	24.0 ±0,065	23.95+0,05	23.90+0,05
22	36.0 ±0,080	35.90+0,05	35.85+0,07
30	45.0 ±0,080	44.85+0,05	44.80+0,10
45	62.0 ±0,095	61.83 <sup>+0,07</sup>	61.80 <sup>+0,10</sup>

The cutout dimensions given are guide values for the installation of ball transfer units. The actual dimensions may vary according to the type and thickness of the material used as the mounting base and any constraints (vibrations, etc.). Users should therefore make trial cutouts to determine the correct dimensions.

# Mounting Tool for Ball Transfer Units R0535 and R0536

for	Part number	Dime (mm	α		
$d_w$		D <sub>2</sub>	D <sub>3</sub>	t <sub>min</sub>	(°)
15	R0536 015 30	29	17	10	30
22	R0536 022 30	43	24	10	20
30	R0536 030 30	53	30	10	24
45	R0536 045 30	73	45	15	26

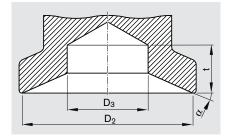





Bosch Rexroth AG Linear Motion and Assembly Technologies Ernst-Sachs-Straße 100 97424 Schweinfurt, Germany Telephone +49 97 21 9 37-0

Telefax +49 97 21 9 37-2 75 (general)
Telefax +49 97 21 9 37-2 50 (direct)
Internet e-mail info.brl@boschrexroth.de

Subject to technical modifications.

© Bosch Rexroth AG 2006

Printed in Germany - p 2006/11/2/S

Ball Transfer Units R310EN 2910 (2006.11)